


BJ161

CAM CLAMPS

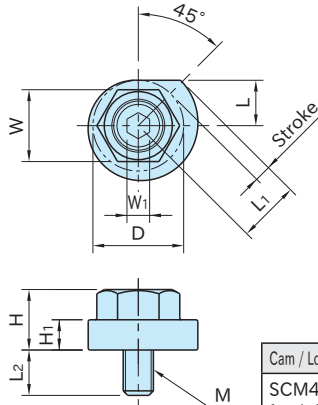

Cam / Locking Screw	Flanged Collar
SCM435 steel Quenched and tempered Black oxide finish	SK95 steel Quenched and tempered Black oxide finish

Part Number	Stroke	L	L ₁	D	H ₁	M	L ₂	H	W	W ₁
BJ161-08001	4.4	12	16.4	24	8	M 8×1.25	12	16	19	6
BJ161-10001	5.5	15	20.5	30	10	M10×1.5	15	20	24	8
BJ161-12001	6.2	17	23.2	34	12	M12×1.75	18	24	27	10


Part Number	Allowable Screw Torque (N·m)	Clamping Force (kN)	Weight (g)
BJ161-08001	50	5.2	55
BJ161-10001	75	8	110
BJ161-12001	90	9.3	185

Feature


- Allows loading and unloading a part faster.
- Compact design

How To Use

To install, lock the flanged collar into the cam using the locking screw and then tighten up the cam with a wrench.

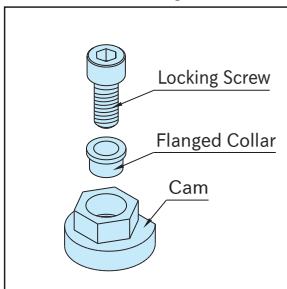

Parts Breakdown

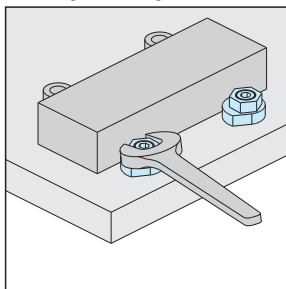

Provides positive clamping